


LOBUL fixed telephone

1. Functions

1. The telephone has all main mobile telephone functions.
2. Supports Text messages in English.
3. Call register and telephone directory.
4. Clock.
5. Key lock function.
6. Speed dial.

2. Description

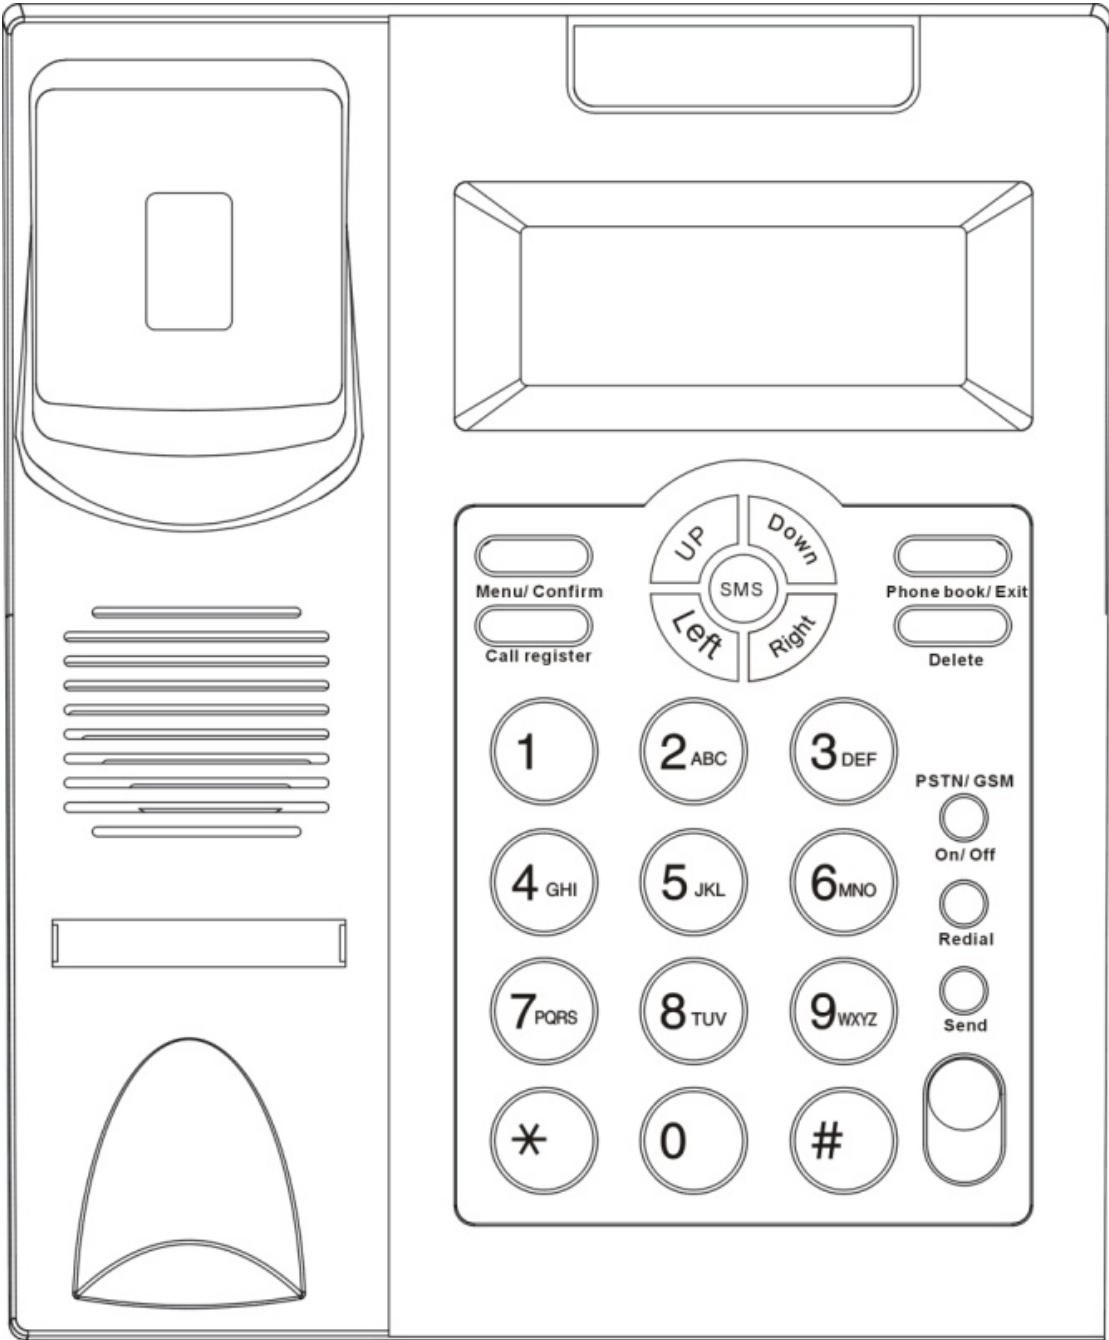

Introduction

Keys specification:

Menu/Confirm: Provides access to menu options when in call mode or allows confirmation when in a submenu.

Call register: Displays all incoming and outgoing calls.

Up: The key provides quick access to contacts in standby mode and allows browsing the submenus.

Down: Provides quick access to contacts in standby mode and allows browsing the submenus.

Left: When in message mode, press the left key to shift the cursor to the left.

Right: When in message mode, press the right key to shift the cursor to the right.

Phone book/Exit: When in standby mode, the key provides access to telephone contacts or exit from the submenus.

Delete: While editing a message or contact, use the key to delete text or telephone number.

PSTN/GSM: When the PSTN port is active, press the key to select an outgoing call system through PSTN or GSM (optional).

On/off: The key is used for switching the telephone on or off.

Redial key: Used to redial the last dialed number.

Send: Without lifting the receiver off the device, press „**Send**” to select the number you wish to send a message to; the key also allows access to last dialed numbers in standby mode.

Hand free: When in call mode, press „**Hand Free**” to dial a different number.

Number key: Numbers or letters.

*** key:** Selects text during message editing.

key: Changes the input mode /letters, numbers or symbols/ or to unlock the keypad.

3. Installation and use

- 1) Carefully place the SIM card in the indicated place.
- 2) Screw the antenna in the device.
- 3) Place the battery or use the adapter from the set.
- 4) Switch the telephone on or off by means of the „**On/Off**” switch at the back of the telephone.
- 5) Once you have switched on the telephone, the device will automatically search for your card’s network. On acquiring access to the network, you can make calls or carry out specific operations.

- b) When both the charger is plugged in and the battery has been placed, the device will automatically charge your battery and will indicate this on the telephone display.
- c) The signal indicator indicates the signal strength of the respective operator. If the signal is weak, call quality will be poor. Please make your calls when a strong signal is available.
- d) If the telephone device requires entering a PIN code, please follow the instructions provided by your mobile operator for the respective SIM card.
- e) Whenever planning to discontinue use of the device over a prolonged period of time, please remove the battery.

4. Main menu

4.1 Messages:

Message send/receive options.

- 4.1.1 Inbox
- 4.1.2 New message
- 4.1.3 Sent
- 4.1.4 Outbox
- 4.1.5 Drafts
- 4.1.6 Voice mail
- 4.1.7 Settings
- 4.1.8 Delete all

4.2 Contacts:

- 4.2.1 View
- 4.2.2 Create
 - 4.2.2.1 Save to SIM card: Saves contacts on the SIM card.
 - 4.2.2.2 Save to phone: Saves contacts in telephone memory.
- 4.2.3 Memory status: Checks available memory; the telephone can store a maximum of 100 contacts.
- 4.2.4 Speed dial

This menu will allow you to delete or edit a quick dial number. The code number displayed before the telephone number indicates the corresponding quick dial number and the latter can be dialed by holding the respective key. A maximum of eight numbers can be stored in key numbers 2 to 9. If no quick dial number has been selected for key numbers 2 to 9, the system will indicate **<empty>**; in that case pressing the „**Menu**“ key and selecting a number key will store the requested number. Upon completing the process of storing the quick dial number has been finalized, when

in standby mode, holding any of the numbers 2 to 9 will display the previously stored number and the same will be automatically dialed.

4.2.5 Delete all entries

4.2.5.1 SIM card: Delete all contacts stored on SIM card.

4.2.5.2 Telephone: Delete all contacts stored in telephone.

4.3 Calls:

4.3.1 Incoming Calls

4.3.2 Outgoing Calls

4.3.3 Missed Calls

4.3.4 Call duration

4.4 Settings:

4.4.1 Phone settings

4.4.1.1 Display settings

4.4.1.2 Keypad settings: Key lock and unlock after a specified time interval; change of password.

4.4.1.3 Reset code: Dial **1234**.

4.4.2 Network settings

4.4.3 Call settings

4.4.3.1 Automatic redial

Select delay period – 4 seconds, 5 seconds, 6 seconds.

Note: Automatic redial is carried out upon expiry of the specified period, and only after a telephone number has been entered.

4.4.4 Quick dial settings

Set the quick dial menu with the help of the „**Up**” and „**Down**” keys.

4.4.5 Audio settings

4.4.5.1 Ring tone: Set incoming ring tone, alarm tone and message tone.

4.4.5.2 Volume: Set ring tone, loudspeaker, keypad tone, alarm tone volume – with the help of the „**Up**” and „**Down**” keys.

4.4.5.3 Ring type.

4.5 Clock:

4.5.1 Date/Time settings: Set the date/time on the phone.

4.5.2 Date/time format.

4.5.3 Alarm settings: Set a reminder alarm.

5. Technical specifications:

Operating frequency	900/1800MHZ
Output power	(2W)900MHZ; (1W)1800MHZ
Interval	200KHZ
Operating voltage	5V; 1500mA
Operating temperature	-10°C ~ +45°C
Humidity	5% ~ 95%
Air pressure	86 ~ 106Kpa